

Technical information for spring hinges



Opening direction of spring hinges acc. to spring type:

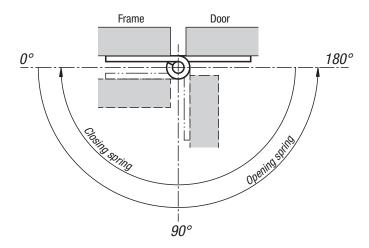

Spring hinge torque developement acc. to angular position:

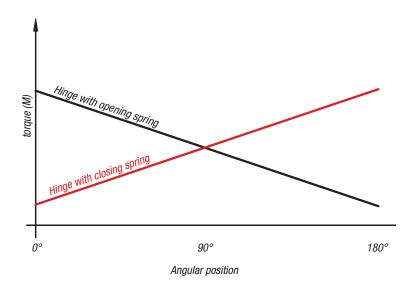

M: Hinge torque in different positions. $M(0^\circ)$: Torque by parallel positioned doors. $M(90^\circ)$ Torque by doors positioned at 90° $M(180^\circ)$: Torque by doors positioned at 180° .


1


Technical information for spring hinges



Hinges with closing spring

Hinges with opening spring

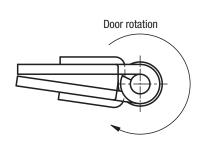


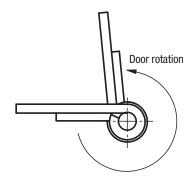



Mounting and opening direction:


Surface mounted:

Recessed mounting:

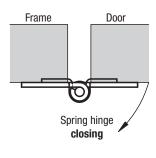

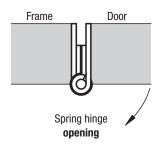

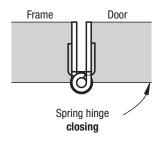

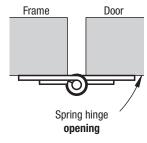

The arrow shows the hinge rotation direction under influence of the spring.